



C3 Corvette Fender Louver Grille Kits

Thank you for purchasing our Grille Kit. We're confident that you'll love the enhanced look that these kits will provide for your Corvette.

Grille Kit Contents:

- Computerized "WaterJet" cut Black or Bright Anodized Aluminum Grilles
- Specially Formulated Industrial Strength Self Vulcanizing Adhesive
- Alcohol Cleaning Packets
- Precut Temporary Application Tape

Instructions:

Note: It is recommended that you only use the specially formulated adhesive provided as it will resist weathering and freeze-thaw conditions, other adhesives may not provide the same superior results.


1. **Notice the Weave.** The grilles have a weave pattern so that you have the option of seeing the open weave or not when installed.
2. **Begin with Passenger Side of Car.** Raise the front side of the vehicle and set it on a jack stand to give you room to access the vent area from underneath the car. Removal of the wheel is a good idea.
3. **Remove the lower fender splash shield.** To access the fender vent, notice a triangular shaped panel located underneath the vent area. Remove the four bolts that hold the panel in place.
Note: Two of the four bolts are located behind the rocker molding. Remove enough of the screws that hold the molding in place to give you room to access the other two bolts.



Access panel as seen from under the car.


Prep Attachment Area.

Included in your kit are alcohol swabs that should be used to clean the vent area in preparation for installation of the grille.

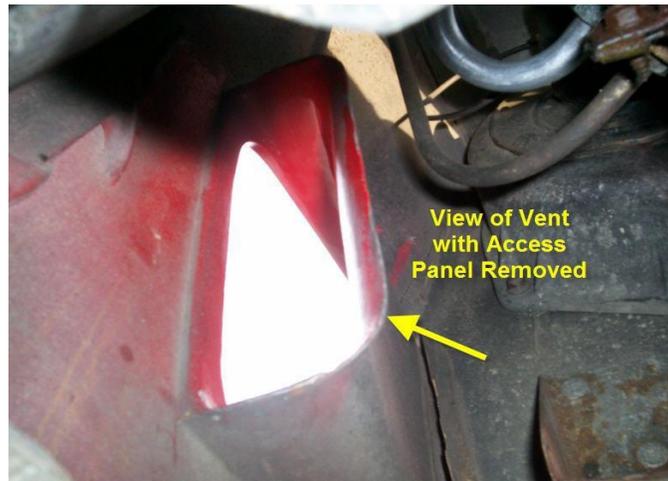

View with access panel removed.


4. **Test Fit Grille.** Fit the grille onto the vent opening and note that the grille is slightly larger than the vent to accommodate a bead of adhesive.
5. **Attach Grille.** Attach the tape strips to the grille at several contact points to where the grille will be temporarily secured to the vent before applying adhesive.

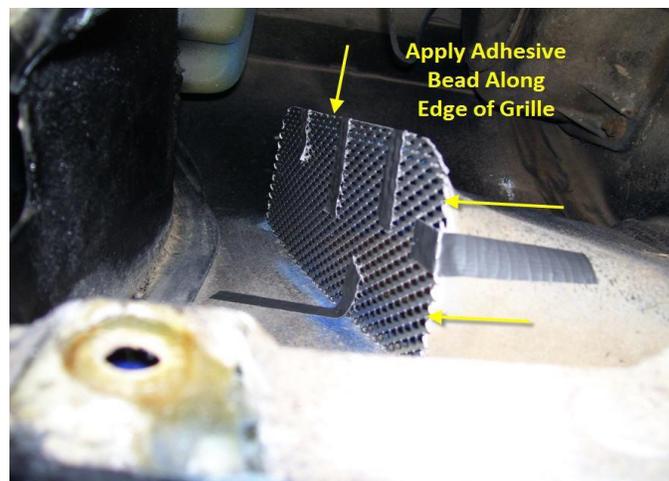

Attaching temporary adhesive strips.

6. **Apply Adhesive.** Apply a spot bead of adhesive around the side of the grille to temporarily secure it before removing the tape strips and applying a final bead. Wait approximately an hour before removing the tape strips. Total curing time is approximately 24 hours. **Let's go to the other side!**
7. **Repeat Process for Driver's Side.** Some Corvettes have a canister located near the vent on the driver's side. The canister may need to be unbolted and temporarily moved out of the way during installation. The three bolts that secure the canister are on the fender well. After installing the grille, check for clearance between the canister and the grille before bolting it back into

place. The canister should not touch the grille. If needed, reposition the canister as shown in the illustration below by relocating the two lower bolts.

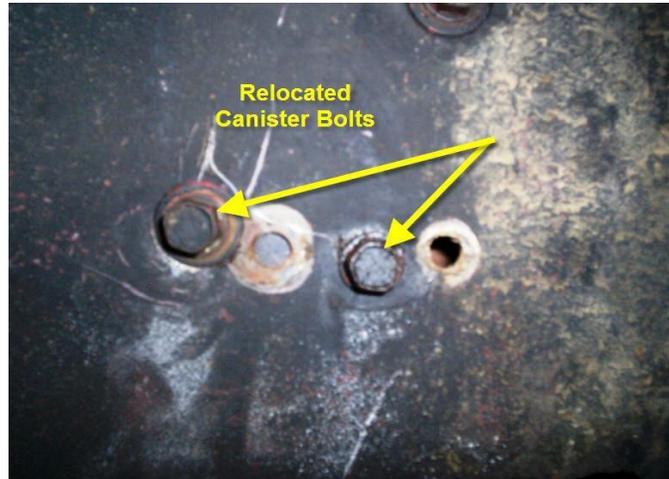

Canister bolts relocated in fender well.

Side Exhaust Alternate Installation. This method allows installation of grilles without removal of the side exhausts pipes.

Steps:

1. Clean the inside edge of the vent opening with alcohol pad provided.
2. Take string or twist ties and string them through the top and bottom of grille.
3. Place a bead of adhesive along the edge of the grille.
4. Fit the grille into the vent opening.
5. Pull the ties tight so that the grille is flush against the back of the vent opening.
6. Secure the ties with duct tape provided. (Be sure to remove any excess adhesive that may seep out from the grille.)

Maintenance & Care: The grilles will easily maintain their great looks for many years and can be cleaned with a glass cleaner and soft cloth. For questions about this product, please call 208-697-1677.

Visit us at www.InnovativeCorvetteProducts@outlook.com to see our other C3 Corvette Products.

U.S. Patent Number: 61/743,051, Copyright © 2012